innovation



Safety First

Manufacturers Of High Quality Safety Cutters, Razor Blades, And Accessories Since 1950









# INTRODUCING ANTIMICROBIAL

Antimicrobial properties built in.



The perfect complement to your existing hygiene protocols.



Our antimicrobial Kleen<sup>™</sup> safety cutters utilize an antimicrobial material that inhibits the growth of bacteria on the product. Clean and wash this product thoroughly per your industry's guidelines.

Please contact your sales rep for inquiries or visit phcsafety.com or kleverinnovations.net for more information





Yellow slide unlocks safety hood and sets blade depth

Safety hood snaps shut and locks after cut

Made in USA

**Ergonomic handle designed** for both left/right hand users

Attach to lanyard for safe keeping

### Lewis K710

### with AUTOMATIC LOCKING SAFETY HOOD

Safety Hood Snaps Shut After Cut!

#### **FEATURES:**

- Safety hood snaps shut and locks once contact with the cutting surface is lost
- Easy-tool-free blade change
- Ergonomically designed for use with either right or left hand
- Safety hood is clear for easy viewing of the cutting edge

#### **OPERATING INSTRUCTIONS:**

- 1. Press yellow slide and push forward (1/4" blade exposure) or back (3/4" blade exposure) to set depth of cut.
- 2. Press and hold front of yellow slide to release safety hood lock.
- Press tip of safety hood on cutting surface and start cutting (once pressure is on safety hood, yellow slide can be released).



- 1. Pull down latch on right side of knife and pull backbone down to expose blades.
- 2. Move latch forward so that blade lock slides away from blade.
- 3. Replace blade with spare blade provided.
- 4. IMPORTANT: TO CLOSE KNIFE MAKE SURE ARROWS ON BACKBONE ARE LINED UP
- BY THE WORD "CLOSE", OTHERWISE THE LATCH WILL BE DAMAGED (SEE INSET).
- 5. Slide backbone back into the body of the knife and swing latch up into body to lock.

For US & Canada Sales: (800) 229-2233 • Email: info@phcsafety.com • www.phcsafety.com For International Sales: info@safetyproductsholdings.com • www.safetyproductsholdings.com



Use Lewis Utility Knife Replacement Blades (#B10CHD)



3/4" Depth Setting (19.05 mm)



(6.35 mm)

Brought To You By





### **QBAR**<sup>TM</sup> Auto-Retractable Safety Knife

### **Fully Auto-Retracting Blade Increases Safety!**

Cutting



Extend blade and cut. Pressure sensitive blade automatically retracts once blade loses contact with cutting surface.

#### **After Cut**



Blade will automatically retract, even with thumb still on button.

#### **Tape Splitting**



Slice through tape easily with bladeless tape splitter to extend life of blades and increase safety.



Safety Holster Available! UKH-675





Easy Blade Change:



Rotate quick release blade change wheel counter clockwise to open safety knife.




Remove new blade from spare blade compartment. Insert new blade underneath blade retainer, aligning blade notch with alignment tab. Close knife and rotate wheel clockwise to lock. Dispose of used blade safely.



Use SPS-92 Duratip Safety Point Blades

**or SB-92** Standard Utility Replacement Blades

For US & Canada Sales: (800) 229-2233 • Email: info@phcsafety.com • www.phcsafety.com For International Sales: info@safetyproductsholdings.com • www.safetyproductsholdings.com

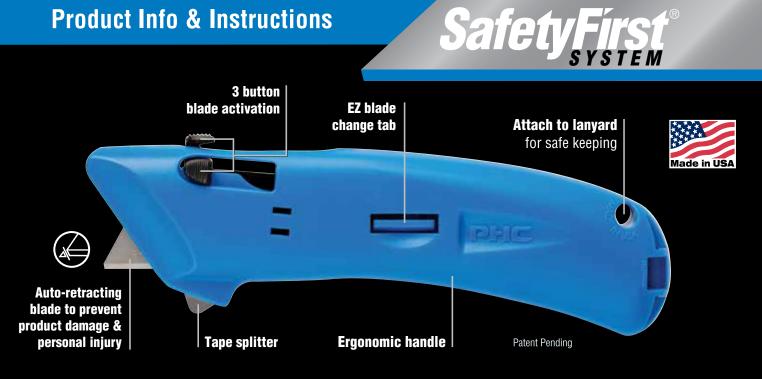

### **EZAR<sup>™</sup>** Auto-Retractable Safety Cutter

### One safe & easy tool for your cutting needs:

**Top Cut** 



Extend blade and pull across top corner of box for a perfect top cut

**Plastic Straps** 



Always cut at a 45 degree angle


**Tape Cut** 




Poke splitter into tape and pull DO NOT use blades to cut tape




### **Easy Blade Change:**

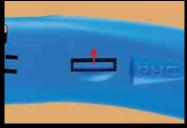

Push EZ blade change tab upward and open safety cutter.



Remove spare blade from spare blade compartment.




Insert new blade underneath blade retainer, aligning blade notch with alignment tab. Close cutter and dispose of used blade safely.



Use SP-017 Safety Point single-notch replacement blades





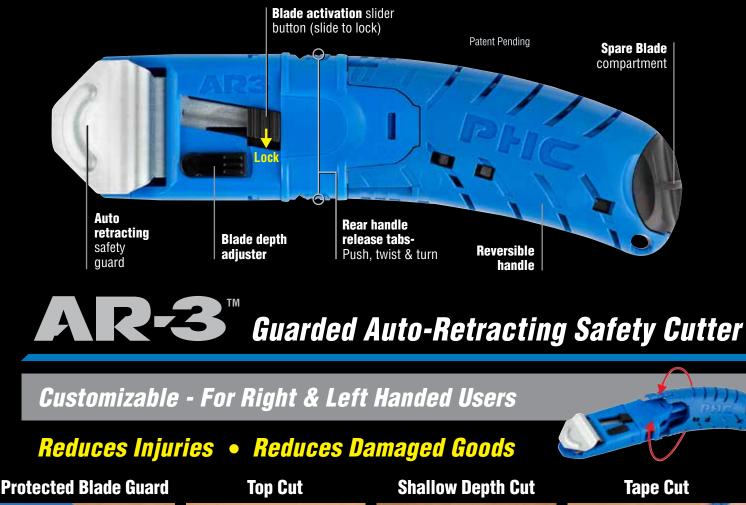



Blade & safety guard extend forward in tandem, protecting user from exposed blade



Extend cutting guide/guard and pull across top corner of box for a perfect top cut



Push blade depth adjuster upward for a shallow cut




Place blade depth adjuster in shallow depth setting for cutting tape






Blade Change Use only S Series replacement blades: # SP-017 or SPD-017

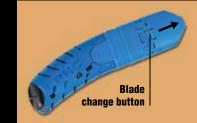

1.Slide blade change button forward and lift lid 2.Remove used blade

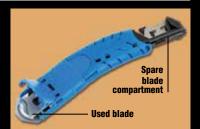

3.Install new blade from spare blade compartment 4.Close lid and pull to lock







### **EBC-1**<sup>™</sup> Enclosed Blade Safety Cutter

### **One safe & easy tool for ALL your cutting needs:**

**Shrink Wrap** 



Hold film taught with opposite hand and cut downward

Cardboard

Poke the nose into top

corner of box and pull





Poke splitter into tape and pull <u>DO NOT</u> use blade to cut tape

**Plastic Straps** 



Always cut at a 45 degree angle

- Enclosed blade prevents all potential lacerations
- Embeded blade prevents loose blades in the workplace
- Safely cuts boxes, shrink wrap, plastic strapping, zip ties & tape
- Long lasting blade










This side for cutting: cardboard, zip ties and plastic straps

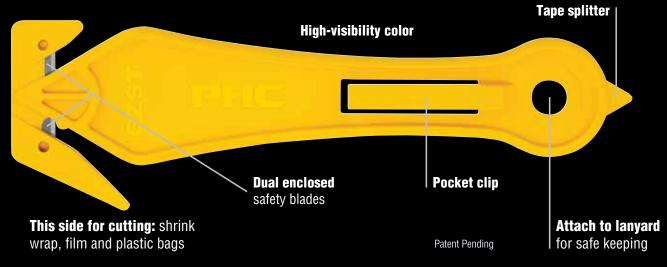



### **One safe & easy tool for ALL your cutting needs:**

Shrink Wrap



Hold film taught with opposite

hand and cut downward with

the long nose side

Cardboard

Poke the short nose into top corner of box and pull Таре



Poke splitter into tape and pull <u>DO NOT</u> use blades to cut tape **Plastic Straps** 

Always cut at a 45 degree angle

Zip Ties




Slide the short nose under zip tie and pull

- Enclosed blade prevents all potential lacerations
- Embeded blade prevents loose blades in the workplace
- Safely cuts boxes, shrink wrap, plastic strapping, zip ties & tape
- Long lasting blade







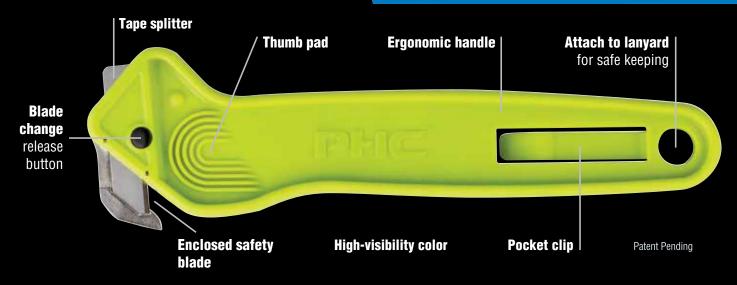

### **Enclosed Blade Safety Cutter**

### **One safe & easy tool for ALL your cutting needs:**

Shrink Wrap



Hold film taught with opposite hand and cut downward



Tape

**Plastic Straps** 



Poke the nose into top corner of box and pull

Poke splitter into tape and pull DO NOT use blades to cut tape



Always cut at a 45 degree angle

### **Easy Blade Change:**



Press the blade change release button and hold



Carefully slide used blade to the right



Remove used blade and dispose of safely



While holding the blade release button down insert a new blade and carefully slide into slot





Use SP-1338 **EZR Replacement Blades** 



## Universal Utility Knife Holster with Pen Holder

Safety

- Large holster can be used with virtually any utility knife or safety cutter
- Convenient pen loop holds pen or marker for easy access
- Attaches to your belt or pocket with a metal clip
- Made of heavy duty nylon

UKH-671



A convenient way to have your safety cutter or utility knife by your side at all times

PACIFIC HANDY CUTTER® Working Safe Everyday.®

For Information Call: (800) 229-2233 Email: info@phcsafety.com www.phcsafety.com Sack



**RBD-009** 



# SINGLE EDGE Blade Dispenser

Safety

### **RBD-009** Dispenser:

- Reduces worker injury by safely dispensing one blade at a time
- Mounts easily onto the PHC blade bank creating a "Blade Change Station"
- Gets used blades out of the workplace, off the floor, out of trash bags and all other potentially hazardous locations
- Safely stores used blades
- Increases worker productivity



*The RBD-009 Dispenser fits conveniently on the PHC blade bank* 

BB00206 BH00206 (w/mounting bracket)



### To Order in US & Canada:

• Fax (714) 662-7595 • Fax (949) 253-9396

*Call Customer Service:* (800) 229-2233

**Email:** orders@pacifichandycutter.com

#### For Information Call:

(800) 229-2233 Email: info@phcsafety.com Website: www.phcsafety.com

### For International Sales:

Email: info@safetyproductsholdings.com Website: www.safetyproductsholdings.com

Most orders shipped next shipping day!



Working Safe Everyday.®